



RIDE. COMMUTE. EXPLORE.

IMPORTANT SAFETY INFORMATION - PLEASE READ BEFORE USE

Read these instructions carefully. Only then will you be able to operate your scooter safely and correctly. Failure to follow this information could result in severe consequences including, death, serious injury or damage to the product.

- Scooter is used at owner's risk
- For adult use only
- Always comply to country, local, state and federal laws when using scooter
- Read User Guide Manual before driving and charging scooter for the first time
- Always wear a helmet and appropriate safety gear
- Make sure you have appropriate training, insurance and fully understand controls before use
- Make sure area, terrain and environment is safe and suitable for driving a scooter
- Always be aware of uneven surfaces, pedestrians, traffic or other obstacles when riding scooter
- Do not ride scooter if you have consumed drugs or alcohol
- Do not use a mobile phone when operating scooter
- If you have a medical condition or previous injury, please check with your doctor that it is safe for you to ride a scooter
- Do not carry passengers or perform stunts
- Do not submerge scooter base under water
- Do not ride scooter in a thunder storm
- Always assess the scooters tyres before use and check scooter safety regularly, especially wear and tear parts to ensure it is safe to ride eg brakes or damaged or loose parts
- Do not drive scooter if any parts develop a fault, are damaged or need replacing. If replacement parts, battery or charger are necessary always use genuine VICI parts purchased from Net World Sports
- Do not leave scooter unattended while charging
- Do not overcharge scooter battery (charge time is in User Guide Manual)
- Only use battery charger provided
- Ensure E-Scooter is used 1-2 times per month and is fully charged regularly for good battery health (prevents battery running out).

PRODUCT WARRANTY INFORMATION

This scooter is supplied with a 1 year warranty against manufacturing defect. This covers the motor, controller and scooter frame. The battery warranty is for 6 months. Warranty excludes wear and tear items such as tyres or misuse.

To activate your free 1 year warranty please visit:
<https://www.networldsports.co.uk/warranty> and fill in the form.

The online form will ask for a serial number which can be found at the base of the scooter. The activation code field is not required. Replacement parts for your VICI Scooter can be purchased from Net World Sports Ltd.

CONTACT US

VICI is The Scooter brand owned by Net World Sports Ltd.

Net World Sports Ltd
Bryn Lane
Wrexham
LL13 9UT
United Kingdom

Telephone
Sales
Customer Service

+44 (0)1691 683807
sales@networldsports.com
cs@networldsports.com