



# FORZA

## Instructions


1. Hold the goals in front of you with your hands on the metal corners, facing inwards.

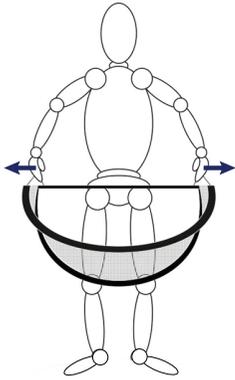


2. Twist your right hand in towards your body.

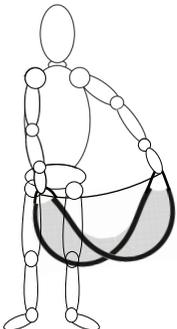


3. Bring your left hand around to meet your right hand.

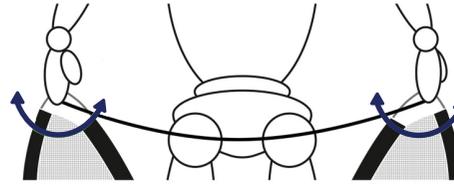

4. Pull both metal corners together until they are touching.

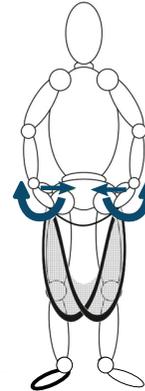

5. Use the velcro strips to fasten.

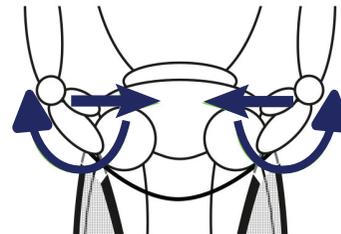

### CAUTION:

- . This product has an internal spring frame that will 'pop' open with some force.
- . Never let small children unfold or fold this product
- . Never allow a naked flame near this product.
- . Do not continue to use this product if any part of the Fiber Glass frame becomes either bent or broken.
- . Do not open your foldable goal in conflicted space as it is designed to open in seconds. Always make sure that there is ample space in the area you have chosen to set up the goals.
- . This product is not a toy and children should use this product under adult supervision.

### PRACTICE:

Before taking your foldable goals outdoors, onto beaches or other public places we suggest you perfect the foldable technique.

### SURFACE:

To ensure that you get the maximum use and enjoyment from the foldable goal, do not set it on concrete or other jagged and hard surfaces as they may tear the material around the frame. It is advised to set up only on a soft surface like grass or sand.

### FRAME:

The frame is made with high tensile spring Fiber Glass and can break if not folded properly. Please read the folding instructions carefully in order to fold the goal properly.

## **NET WORLD SPORTS»**

Net World Sports UK  
www.networld-sports.co.uk  
sales@networld-sports.co.uk  
+44 (0) 1691 683 807

Net World Sports USA  
www.networld-sports.com  
sales@networld-sports.com  
1-866-861-9095